 
 
 
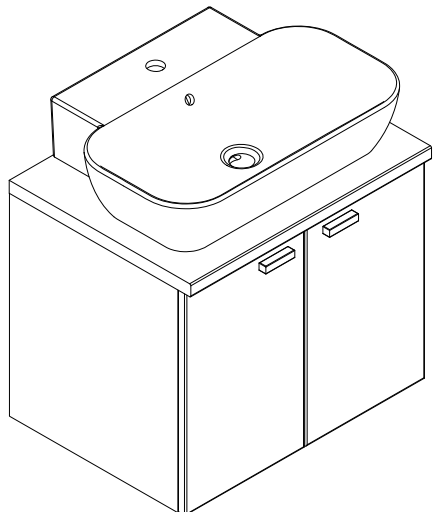 
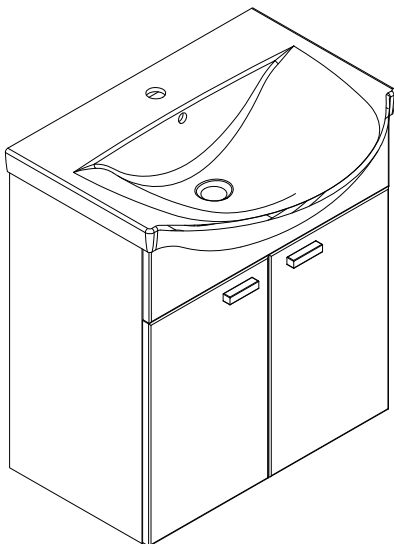 


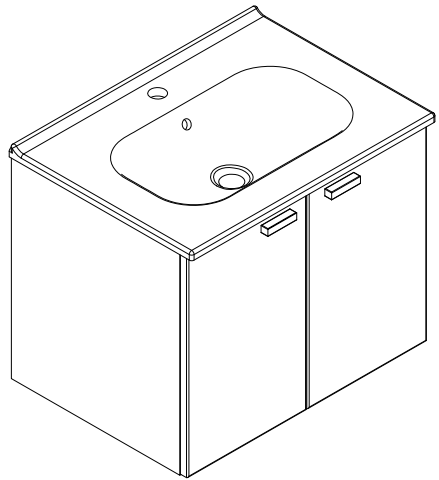

DANSANI®

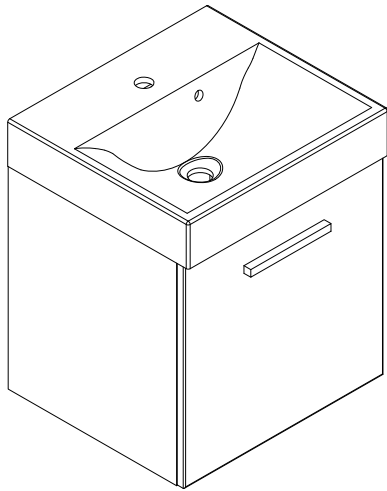 


8x



5-500

2x



30010190

8x



5,0-60SU

4x



 
195000000

2x



3,5-20SU

2x




190040610

8x



5-500

 2x



30010190

8x



5,0-60SU

4x



 
195000000

4x



3,5-20SU

2x



190040610

2x



 
190010110

8x



5-500

2x



30010190

8x



5,0-60SU

4x



 
195000000

4x




3,5-20SU


4x




190040610

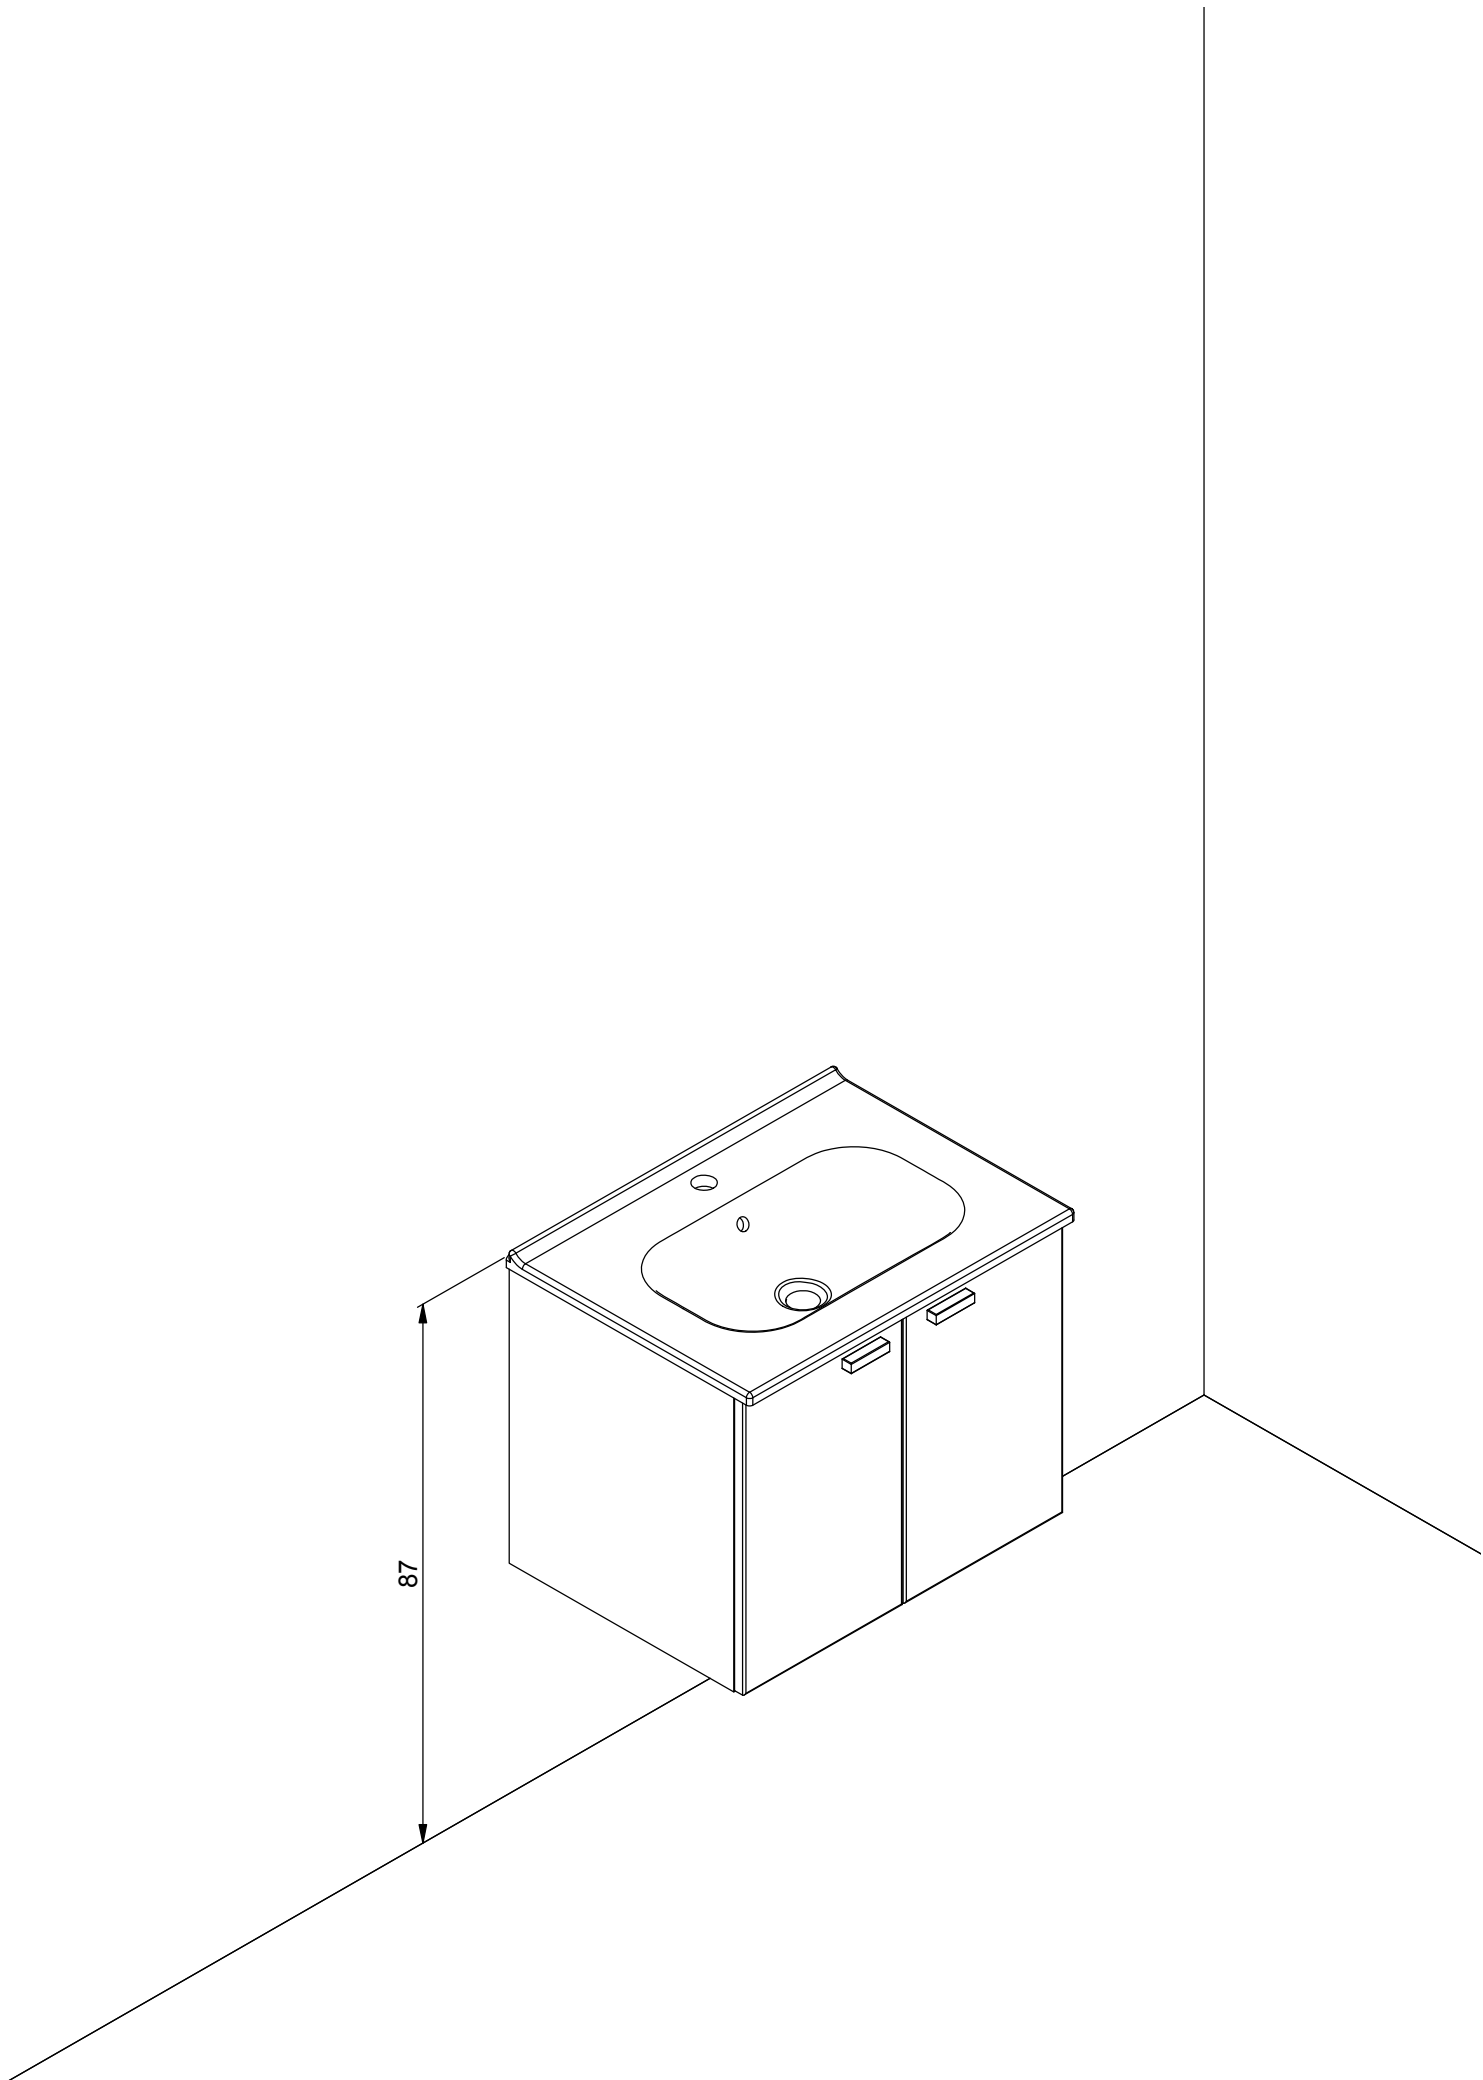 


Menuet
X=76

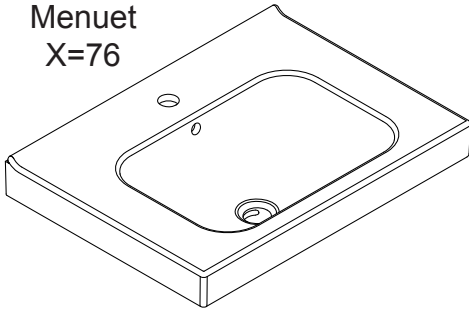 


Andante / Azure
X=78

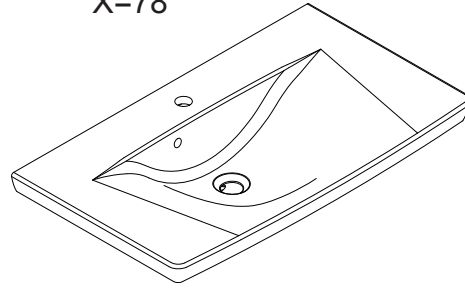 


Domino
X=73

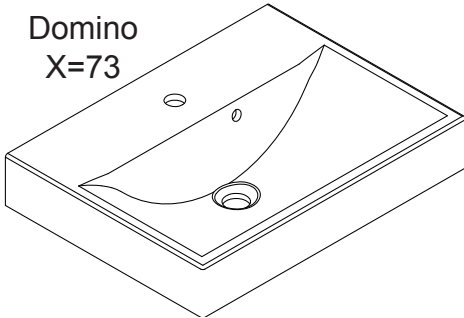 


Allegro / Aura
X=79

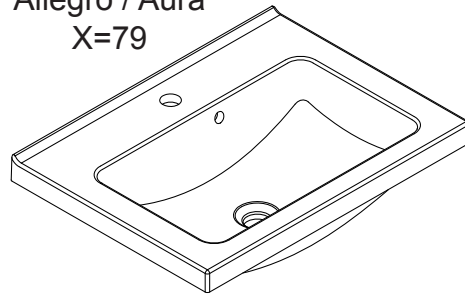 

Kantate / Karat
X=81

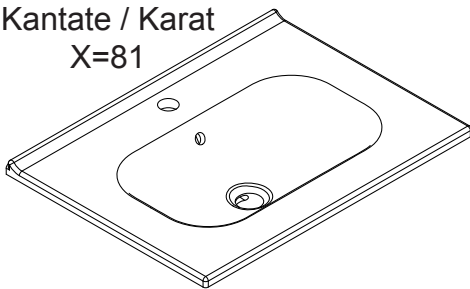 


Cadenza
X=75

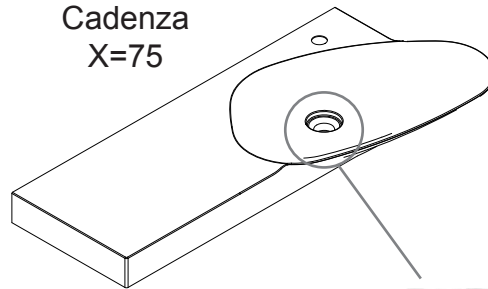 


NB! PURUS

 
Vivo / Velvet
X=78

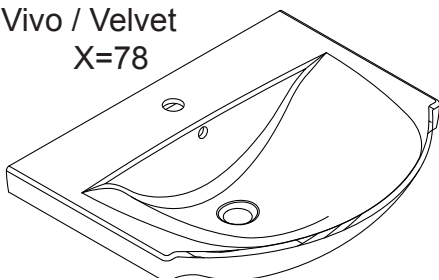


Piano
X=67

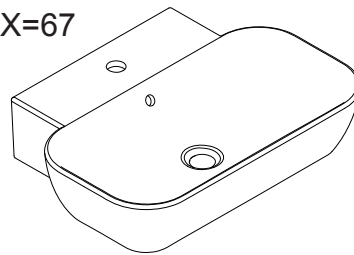 


Fresco / Facet
X=81,1

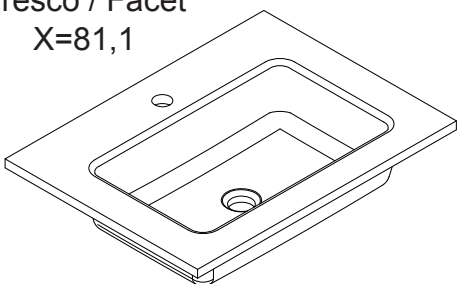    

 


Canto
X=73,9

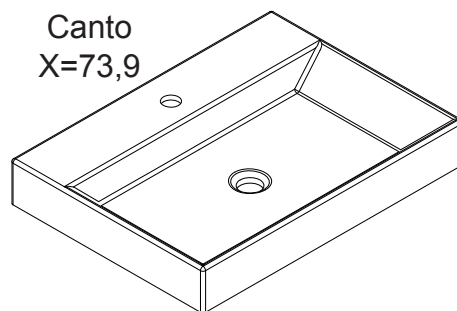


1

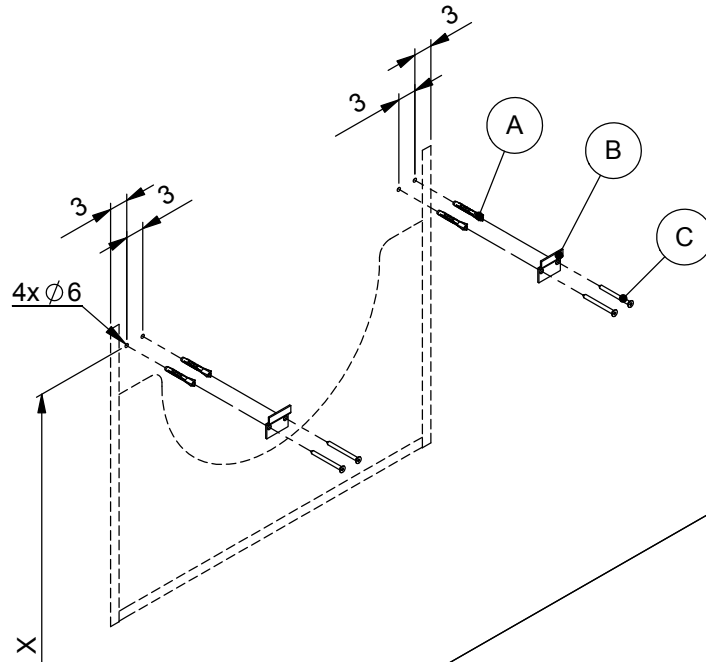


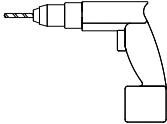	4x		2x		4x
		5-500		30010190	5,0-60SU
	(A)		(B)		(C)

 
2

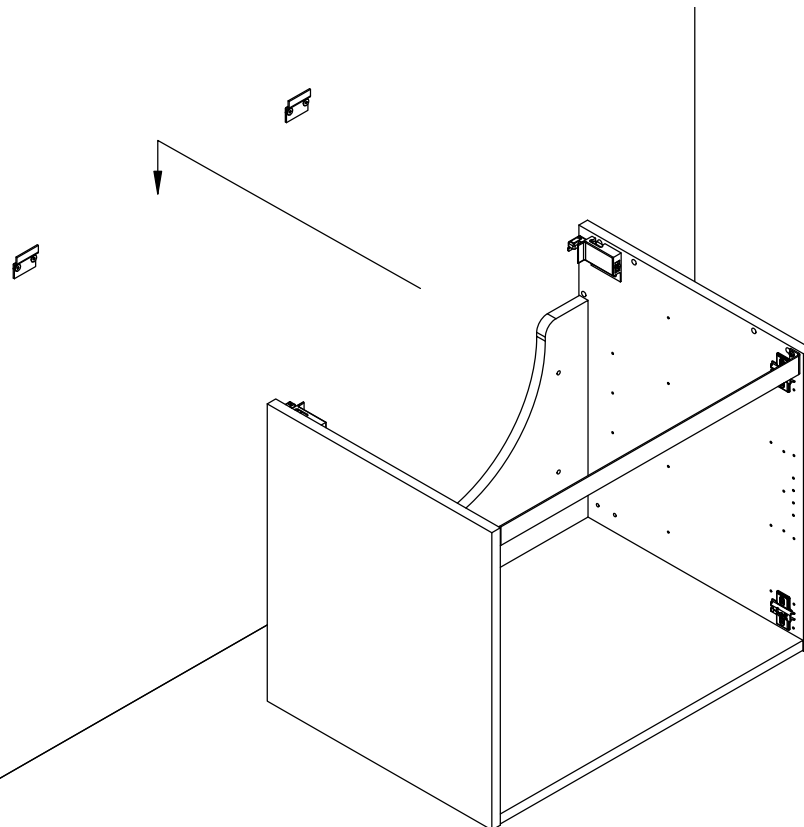


3

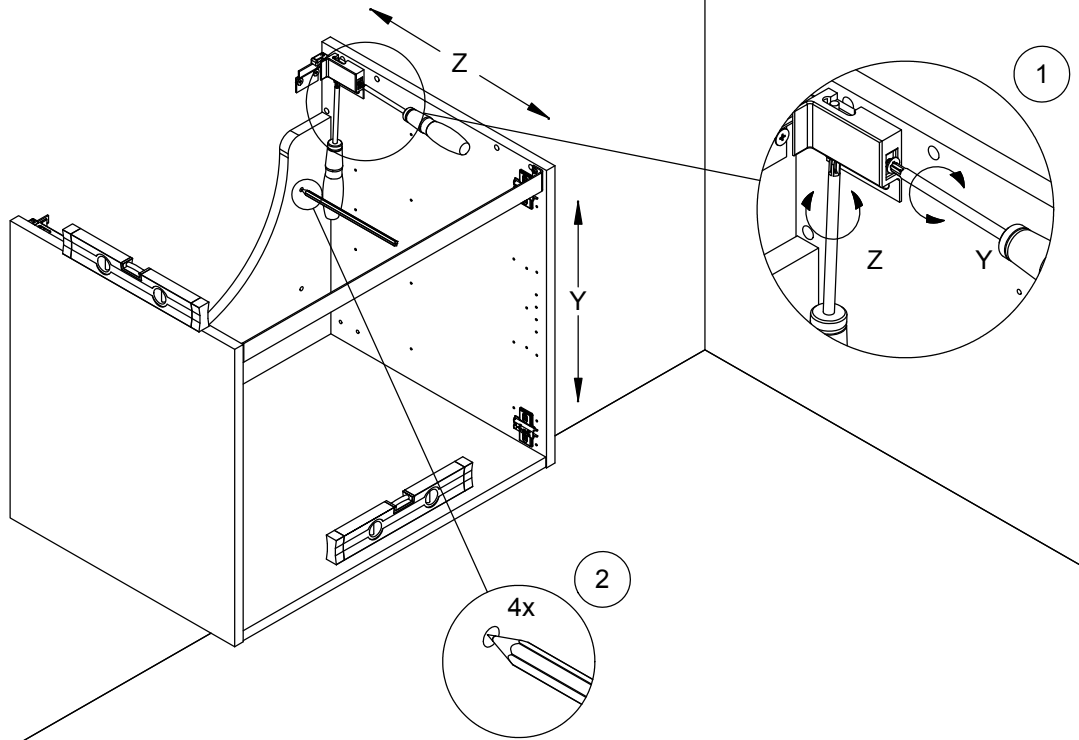 



4

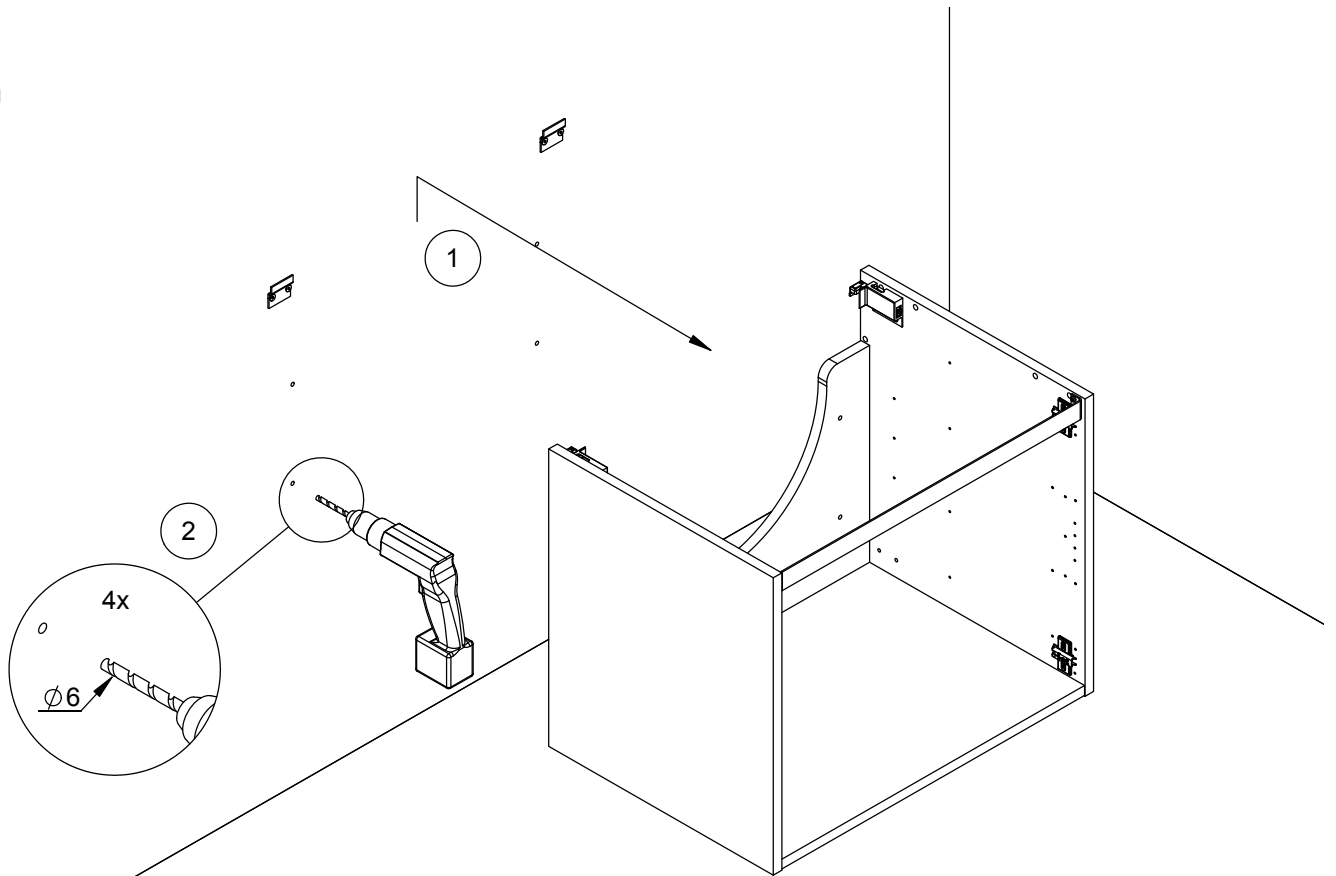 


5






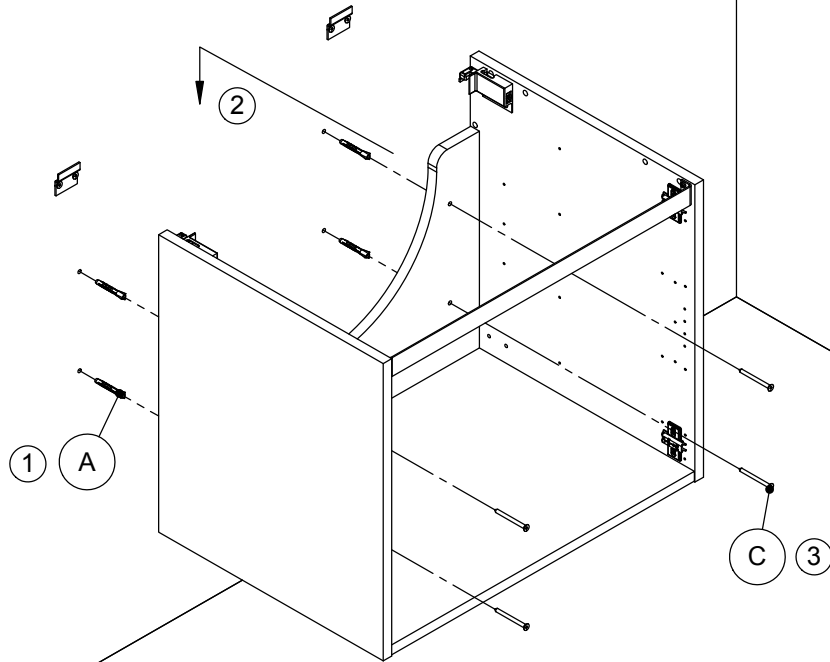 


 4x	4x
	
5-500	5,0-60SU
(A)	(C)

 6

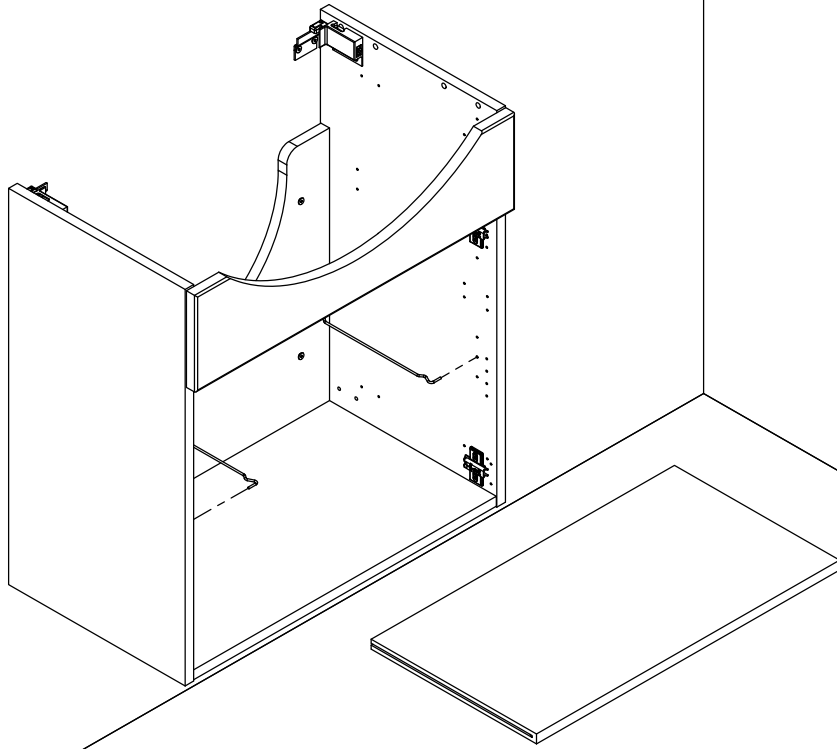


7

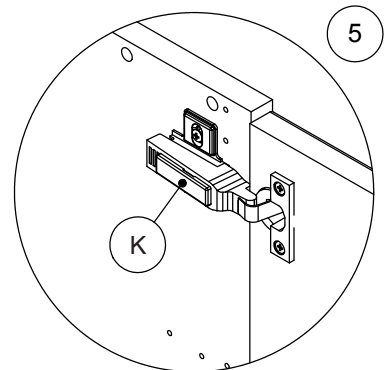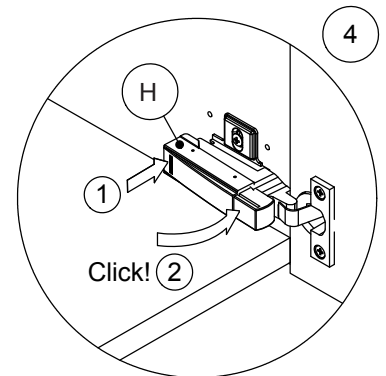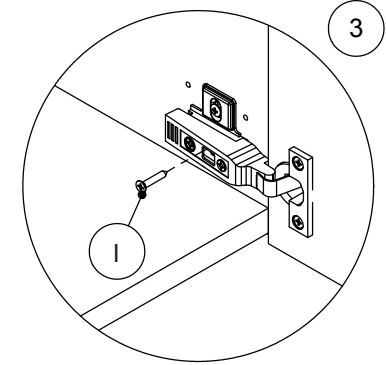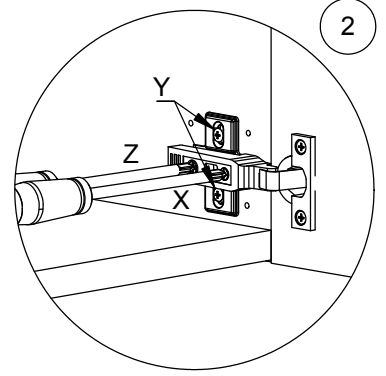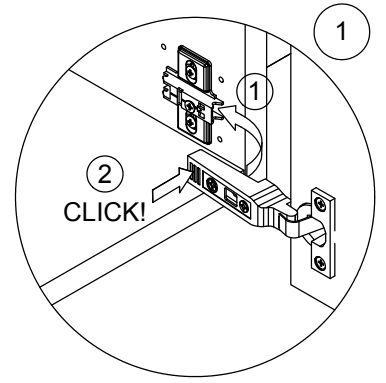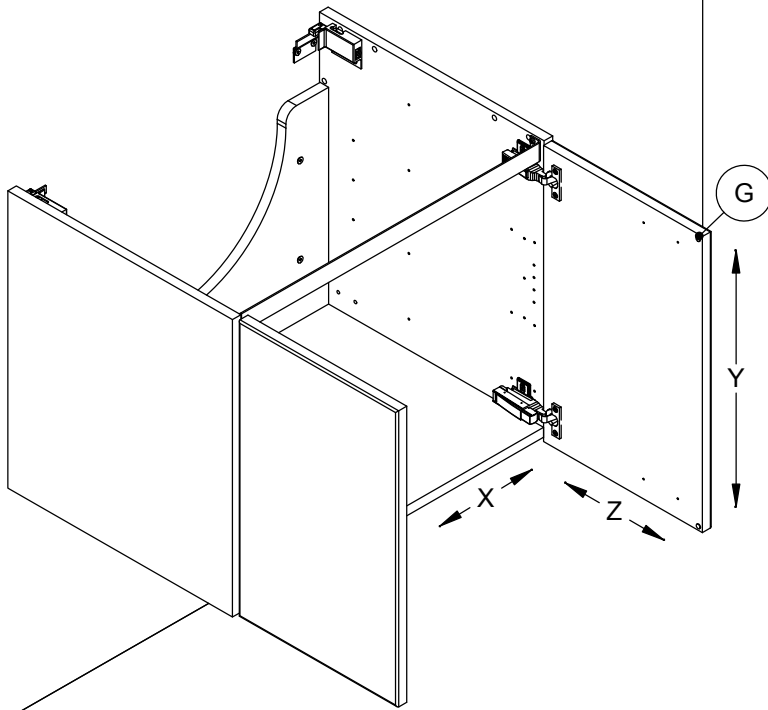      


195000000	3,5-20SU	190040610	190010110
(G)	(I)	(H)	(K)

 
8

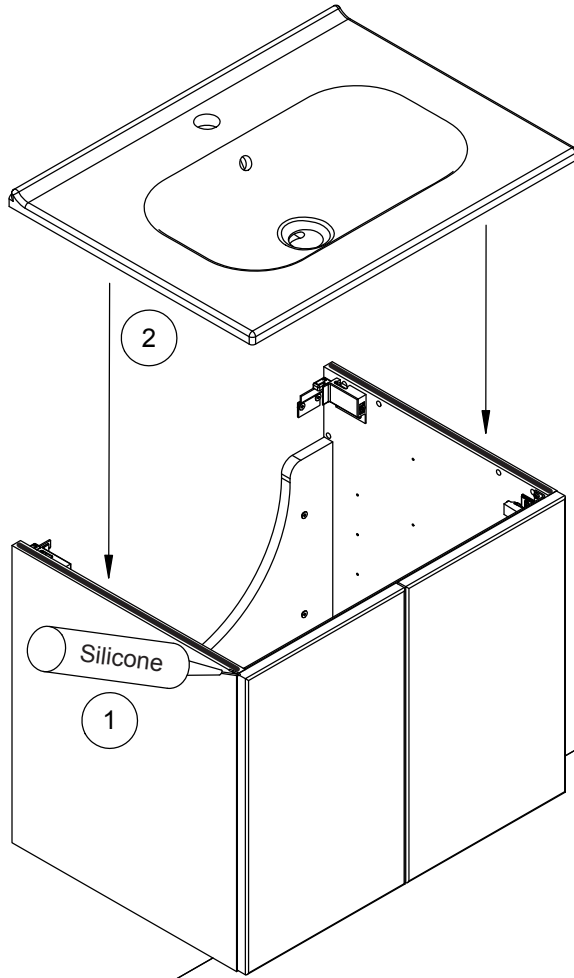


9

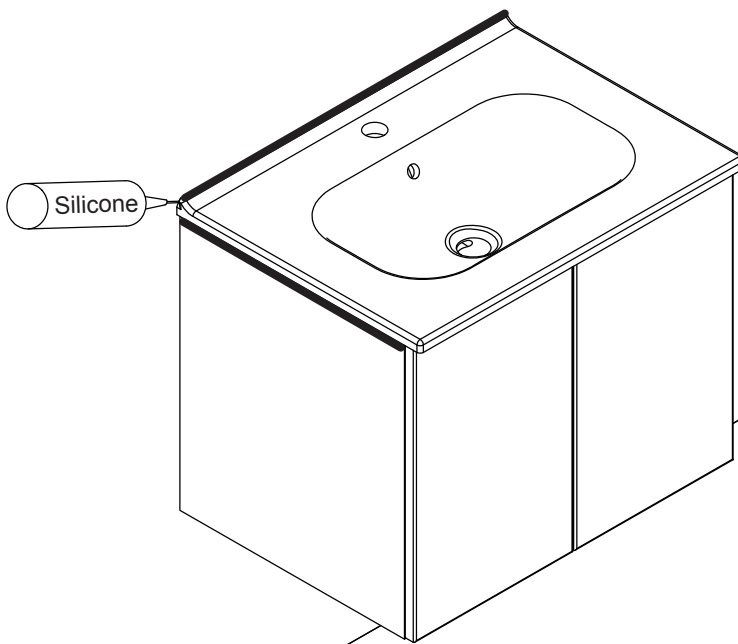 


10


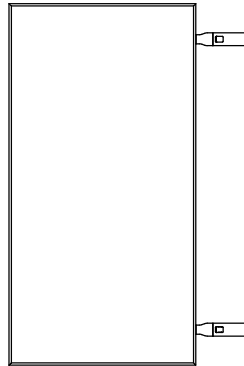 


1

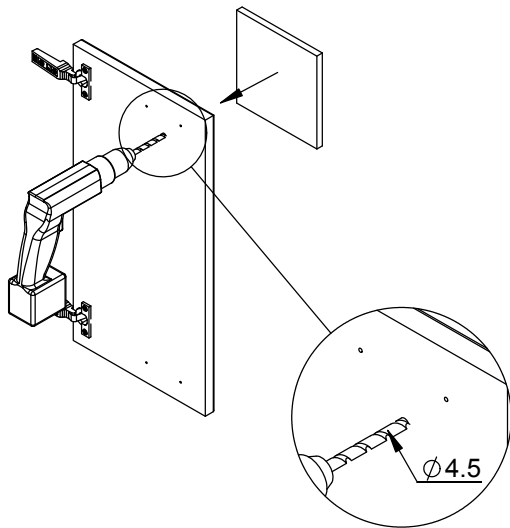 

2

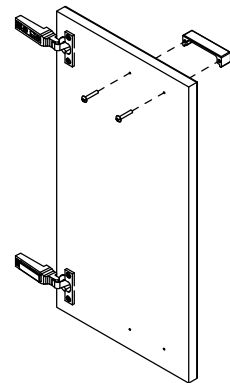 

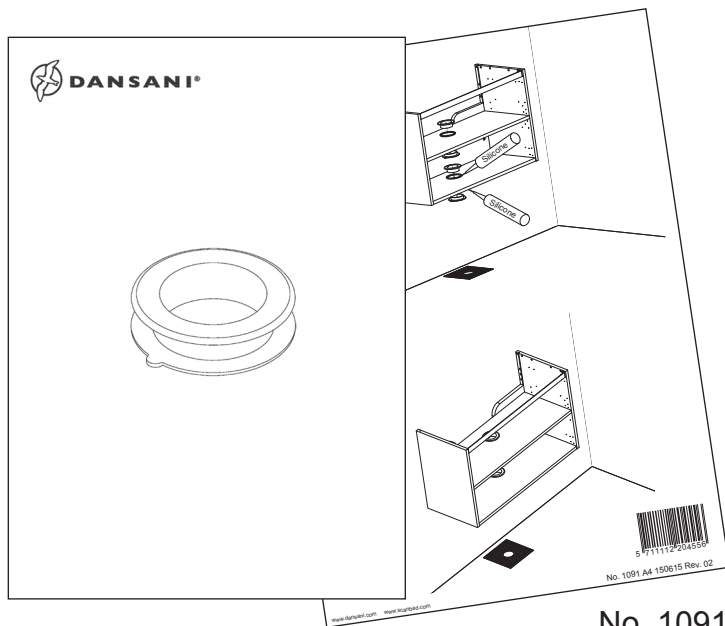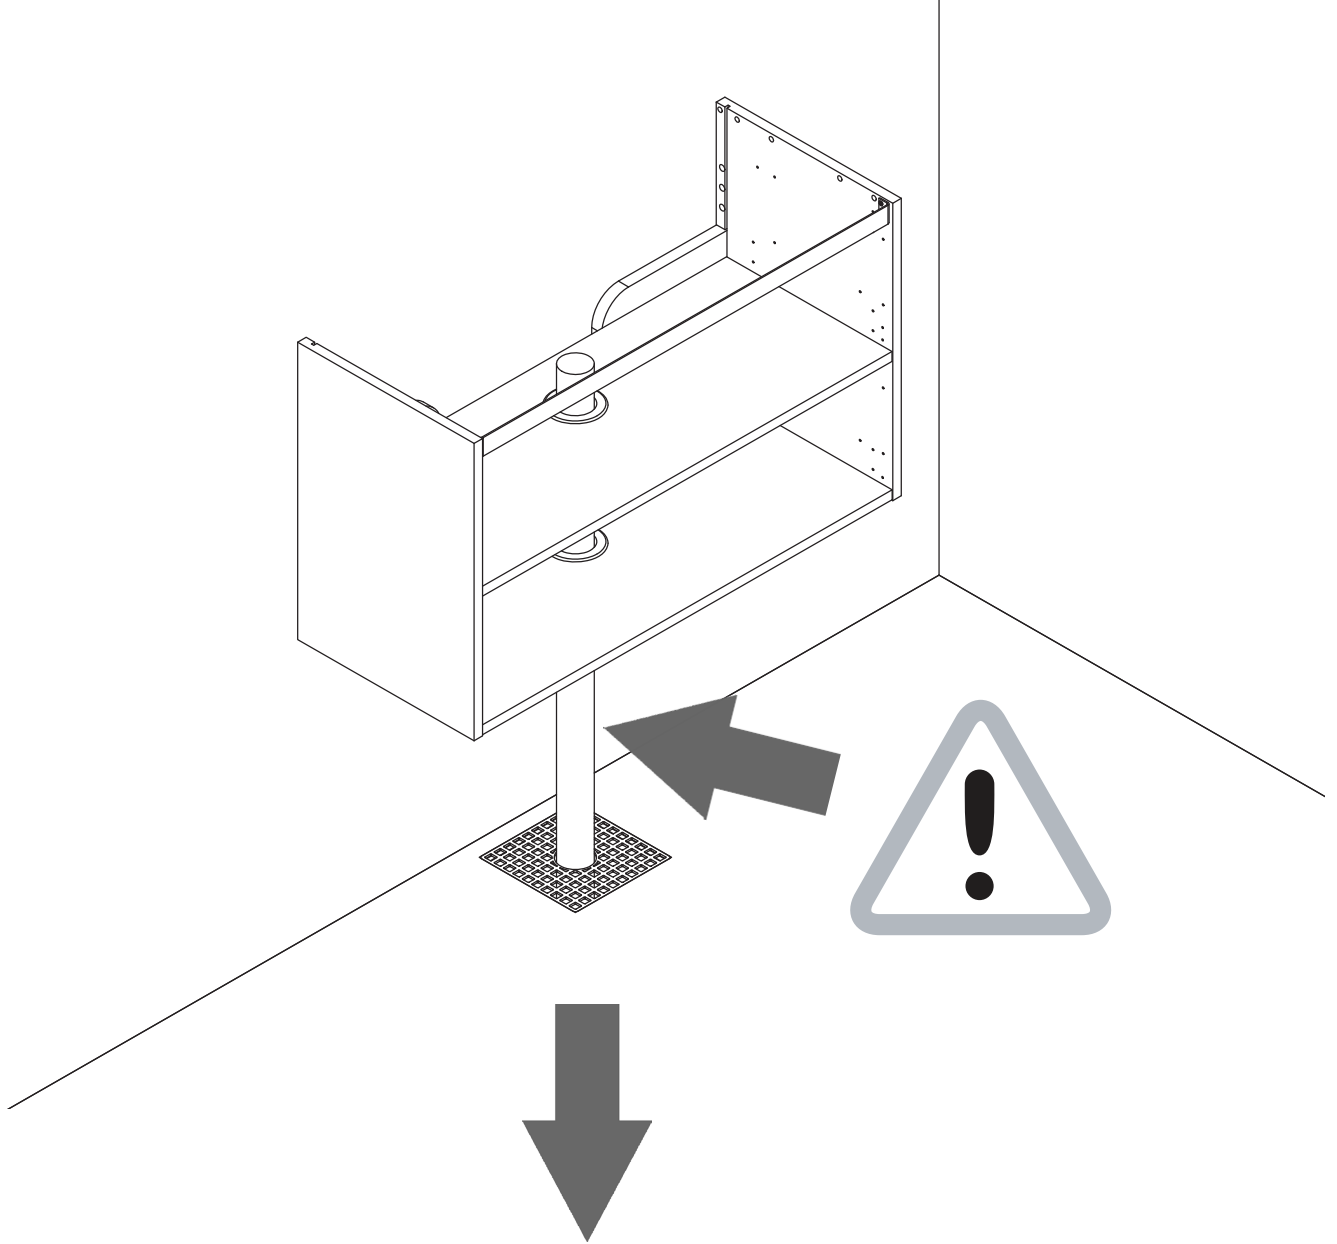  

No. 1091



5 711112 176303